QUICKGUIDE LUNA CEILING HOIST



REMEMBER **ALWAYS TO PLACE** THE HAND CONTROL IN THE CHARGER **AFTER USE**

BATT.



Battery-

- 100%
- 50 %.
- MUST BE CHARGED

Lift up

 
Lift down

Reset ___

If the RESET button flashes: Press RESET down for 5 seconds, and the lift works again.

Emergency stop

After pressing the red **STOP** button, Reset must be pressed down for 5 seconds. in order to re-activate the handcontrol.



STOP



code for further information





WIN M CARE

EMERGENCY LOWERING

Use if **Lift up / Lift down** isn't working; Press down the parachute button during lowering, which will start after 5 seconds.

You will hear a constant "beep" when pressing down the parachute button.

If the electrical powered emergency lowering is not working, use the manual emergency lowering:

- 1 Take the key from the top of the charger.
- (2) Remove the hand control.
- 3 Remove the plug on the side of the Luna.
- (4) Put the key into the Luna.
- (5) Turn the key counter clockwise to lower the user.



